| Acura_V01.20 INJ Function List (Note:For reference only) | |
|--|--|
| NOTES: | |
| • This function is supp | ported. |
| * This function may be | supported, which depends on the actual condition of the vehicle. |
| O This function is not supported. | |
| ▲ This function is the new feature in this version. | |
| Make | INJ |
| ACURA | * |